Button Layout

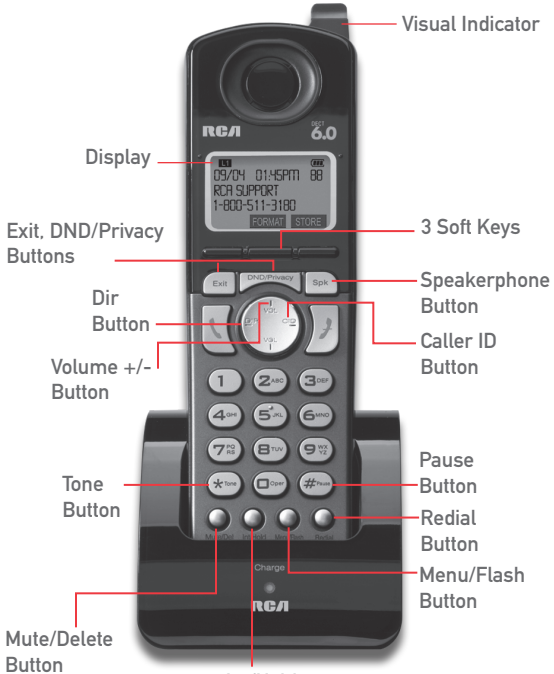

quick start guide

25055RE1

RCA is a trademark of RCA Trademark Management S.A., used under license.

Registering your phone

1. To register your 25055 handset to a compatible RCA base phone, press the REG soft key.

NOTE: If your handset is unregistered, the LCD screen will read PRESS "REG" TO INITIATE REGISTRATION. The REG soft key will be the only option available.

3 soft keys

2. The LCD will then read REGISTERING… and will begin searching for a compatible RCA base phone.

NOTE: Your base phone must be an RCA 25210, 25212, 25250, 25252, 25255 or 25270 and must have available capacity to support another accessory handset. Please see your base phone's instruction booklet to find how many accessory handsets or headsets it can support.

If your phone is a 25212, 25252, 25255 or 25270:

3. While your 25055 handset's LCD reads REGISTERING… press the MENU soft key on your base phone.
4. Press SELECT again on the PHONE SETTING menu.

MAIN MENU
→ PHONE SETTING
DISPLAY SETTING
SOUND SETTING

5. Using the VOL (+/-) button to navigate, scroll to ADD HEADSET and press the SELECT soft key. The LCD on the base phone will read PAIRING PLEASE WAIT…
6. If registration was successful, the LCD on the base phone will read PAIRING COMPLETE!, the LCD on the handset will read REGISTRATION COMPLETE! and you will hear a confirmation tone as both return to the main menu. If registration fails, you will hear an error tone and the LCD on the base phone will read PAIRING FAILED! You will head an identical error tone from the handset, with the LCD reading HS REG FAILED.

If your phone is a 25210 or 25250:

3. While your 25055 handset's LCD read's REGISTERING…press and hold the PAGE button on your 25210 or 25250 base phone until you hear two beeps. The base phone's LCD will read REGISTRATION.
4. When the base phone and the handset have completed the registration, each phone will beep and read REGISTRATION COMPLETE on their LCD screens before returning to the main menu.